


V-Flag™

Assembly instructions



Do not display your outdoor banners in extreme winds (24-31mpg or 6bt and higher) and / or thunderstorms. Do not use near overhead wires. Displaying in high winds or near overhead wires may result in property damage, injury or death and any and all existing warranties.

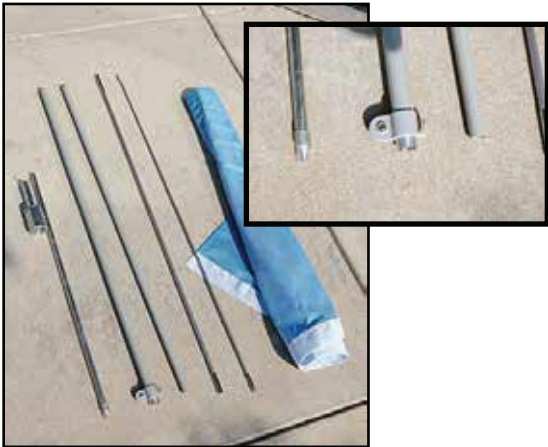

Stake, mast poles and banner (concave shape shown in example)



Place stake into the ground. If required, a hammer can be used to gently tap the stake in.



Assemble mast poles. Thickest section into thinnest.



Slide mast into pocket at bottom of banner until tip of mast meets end of banner pocket.



With mast all the way into the banner pocket, pull banner down.



Hook banner loop onto the hook on the adjustable sleeve. Tighten sleeve until desired tension.



Slide mast bottom onto top of stake.



To break down, repeat steps in reverse. Use caution as the banner mast is now under tension.



CARE INSTRUCTIONS: Outdoor banners are subjected to rain and dirt. If your banner appears stained or dirty in any way, simply wash with cold water in a stationary tub or machine wash cold delicate without soap. Air dry.